

DIRECTION : HANDLE BAR



1	56110-15A00	Handlebar, Lh	1
2	56120-15A00	Handlebar, Rh	1
3	56140-15A00	Holder, Handle Bar	1
4	56130-15A00	Lock, Handlebar	2
5	56141-15A00	Spring	2
6	GB/T 6187.2 M10X1.25-Zn.DJ	M10×1.25 Flange Nut	2